

Mazda cx-3

2017-2018 MAZDA SCHEDULED MAINTENANCE MENU

EVERY 8,000 KM OR 6 MONTHS

- Replace engine oil and filter
- Inspect brake and clutch fluid, washer fluid, and coolant level
- Inspect air filter
- Inspect function of all lights
- Inspect all tires inflation and wear*3
- Lubricate all locks and hinges
- Rotate tires*3

EVERY 24,000 KM OR 12 MONTHS

Includes 8,000 KM inspection, plus:

• Inspect and clean brake discs and pads, front and rear

EVERY 32,000 KM OR 24 MONTHS

Includes 8,000 KM inspection, plus:

- Inspect fuel lines and hoses*2
- Inspect brake lines, hoses and connections
- Inspect steering operation and linkage
- Inspect front and rear suspension components, ball joints and wheel bearing axial play
- Inspect driveshaft dust boots
- Tighten bolts and nuts on chassis and body

EVERY 40,000 KM OR 24 MONTHS

Includes 8,000 KM inspection, plus:

• Replace cabin air filter

EVERY 48,000 KM*4 OR 24 MONTHS

Includes 24,000 KM inspection, plus:

Inspect drive belts

EVERY 56,000 KM

Includes 8,000 KM inspection, plus:

Replace air filter

EVERY 64,000 KM OR 48 MONTHS

Includes 32,000 KM inspection, plus:

Inspect emission hoses and tubes*2

EVERY 72,000 KM OR 60 MONTHS

Includes 24,000 KM inspection, plus:

Inspect exhaust system and heat shields

EVERY 120,000 KM

Includes 40,000 KM inspection, plus:

· Replace spark plugs

EVERY 192,000 KM OR 10 YEARS

 Replace coolant, after that every 96,000 KM*1 or 5 years

ADDITIONAL OPERATIONS

- Inspect flat tire repair kit (if installed) annually and check fluid expiration date
- If rear differential or transfer case has been submerged in water, replace rear differential/transfer oil

At each visit, we'll provide you with an exclusive Vehicle Inspection Report,

which shows you the overall condition of your Mazda.

CLICK HERE FOR AN ENLARGED VERSION



Scheduled services may vary by year of vehicle. Please consult your Service Advisor or Owner's Manual for the specific maintenance intervals pertaining to your vehicle.

TO LEARN MORE, CLICK ON LOGO







Your Mazda Dealer will provide you with a completed service checklist on every maintenance visit. In addition, your Mazda will be road tested after any servicing relating to brakes, steering or driving performance, to help verify safe functioning. Information listed in this document is accurate at time of publication and is subject to change without notice. Ask your Mazda Dealer for more detailed information. This inspection list/schedule is intended as a guide only and should not be relied upon to ensure vehicle safety. See your Mazda dealer for full details, maintenance and inspection.

Inspect is defined as: inspect and clean, repair, adjust, fill up, or replace if necessary.

- *1 Use of FL-22 is recommended when replacing engine coolant. Using engine coolant other than FL-22 may cause serious damage to the engine and cooling system.
- *2 According to state/provincial and federal regulations, failure to perform maintenance on these items will not void your emissions warranties. However, Mazda recommends that all maintenance services be performed at the recommended time or mileage/kilometer period to ensure long-term reliability.
- *3 The Tire Pressure Monitoring System (TPMS) initialization must be performed so that the system operates normally (if equipped).
- *4 If the vehicle is operated primarily under any of the following conditions, replace the rear differential oil at every 48,000 KM:
 - a) Towing a trailer or using a car-top carrier
 c) Extended periods of idling or low speed operation
- b) Driving in dusty, sandy or wet conditions d) Repeated short trips of less than 16 KM



VEHICLE HEALTH < CHECK



CUSTOMER NAME:		R.O. #:	SERVICE ADVISOR:	
VIN (LAST 6 DIGITS): LICENCE PLATE #: _		ODO	METER:	DATE:
⋘ GOOD - CHECKED OK	FAIR - REQUIRES FUTURE ATTENTION	 ▼ REPLACE - REQUIRES	MMEDIATE ATTENTION CHECK	KED FOR OUTSTANDING RECALLS
PERIMETER INSPECTION FRONT Lights/lamps Windshield Washer system Wipers/arms Body damage Horn operation		REAR Lights/lamps Washer system Wipers/arms Body damage	NEXT MAINTENAN NEXT MAINTENANCE SERVICE NEXT APPOINTMENT	DEALER CODE OATE (MM/DD/YY) TIME
VISUAL INSPECTION UNDER HOOD Fluid levels (brakes, stee clutch, window washer, coc manual/automatic transmi Drive belt(s) Air filter Radiator, hoses/clamp and coolant condition —————— °C Heater hoses/clamps Air conditioning hoses Battery/cables/clamp	s to:	Suspension components Shocks & Struts Exhaust system CV drive axle boots (if equipped) CHECK FOR LEAKS Engine oil Transmission	COMMENTS & RECOMME	NDATIONS:
BRAKE INSPECTION Lining/pad Rotor Caliper Lines/hose Lining/pad Rotor Caliper Lines/hose Lining/pad Lining/p	LF RF	Lining/pad Rotor Caliper Lines/hose Lining/pad Rotor Caliper Lines/hose Lining/pad Rotor Caliper Lines/hose	MEASURE FRONT / REAR BR LF 50%+ 20%-50% 0%-20% LR 50%+ 20%-50% 0%-20% Measurements Not Taken	RF 50%+ 20%-50% 0%-20% RR 50%+ 20%-50% 0%-20% Obeclined Brake Inspection
TIRE INSPECTION WINTER TIRES Tread Wear 32 ^{nds} Tread Wear 32 ^{nds} LF	RR LR RECOMMENDED: OF	PSI SPARE PSI LL SEASON TIRES Tread Wear 32nds Tread Wear 32nds Tread Wear 32nds ALIGNMENT REPLACEMENT BALANCE	20% - 50%	